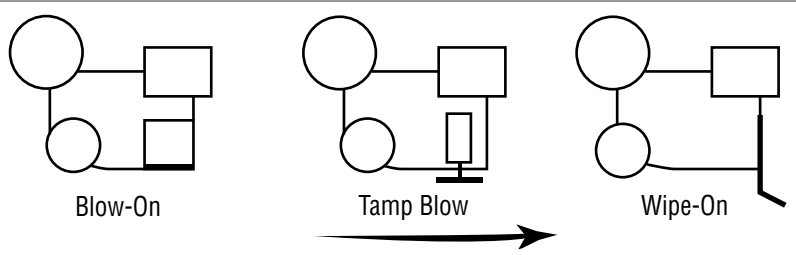
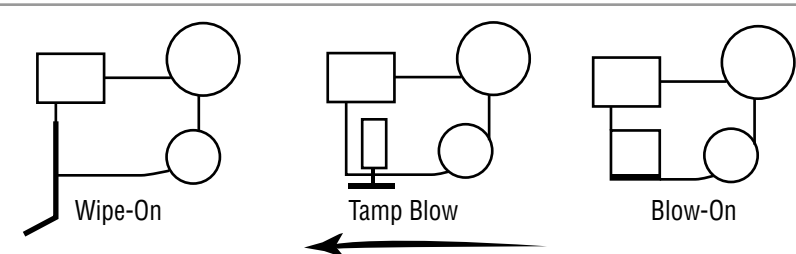
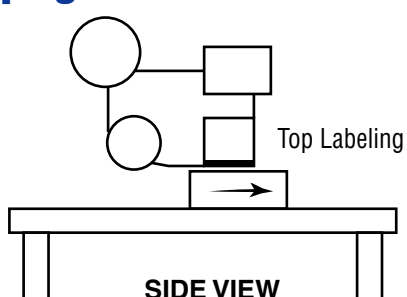
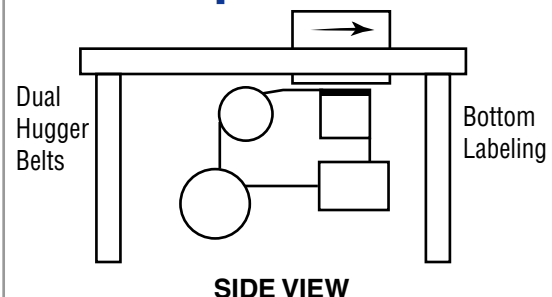
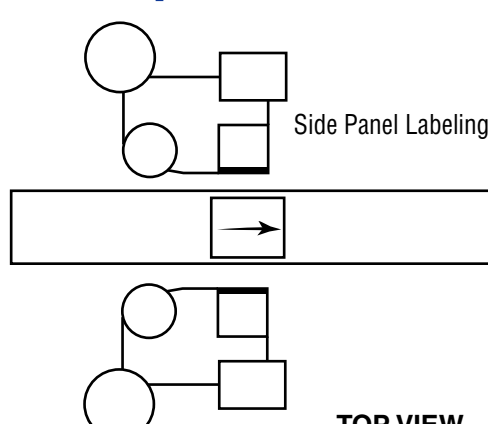
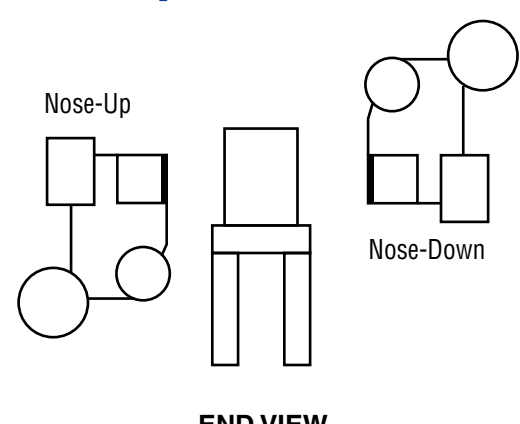


Handing & Attitudes

<p>Applicator Handing The hand of the applicator remains the same regardless of which side of the conveyor it is located on or how it is positioned (i.e., upside down).</p>	
<p>Right Hand</p>  <p>Blow-On Tamp Blow Wipe-On</p>	
<p>Left Hand</p>  <p>Wipe-On Tamp Blow Blow-On</p>	
<p>Applicator Attitudes Attitude generally determines the orientation or location of controls, gauges, tubing, decals, supports, etc. Be sure to specify attitude whenever possible.</p>	
<p>Upright & Above</p>  <p>Top Labeling</p> <p>SIDE VIEW</p>	<p>Bottom Up</p>  <p>Dual Hugger Belts Bottom Labeling</p> <p>SIDE VIEW</p>
<p>Reels Up</p>  <p>Side Panel Labeling</p> <p>TOP VIEW</p>	<p>Nose-Up/Nose-Down</p>  <p>Nose-Up Nose-Down</p> <p>END VIEW</p>